



GC100/GC150

Quick Guide V1.2

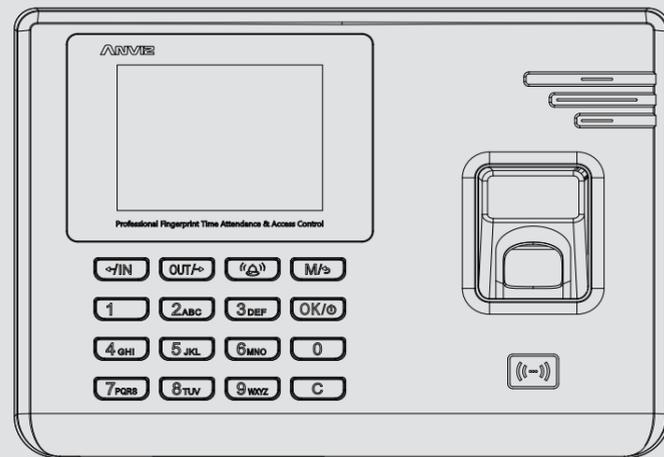


Packing list

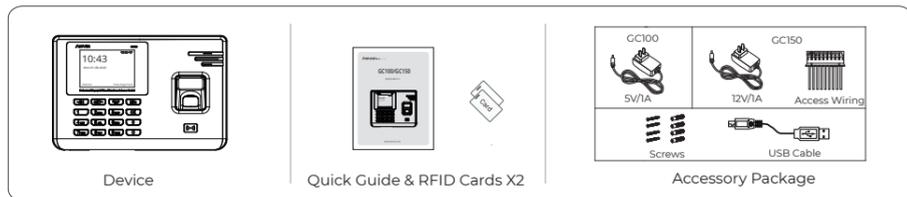

Installation Steps



Interface Description

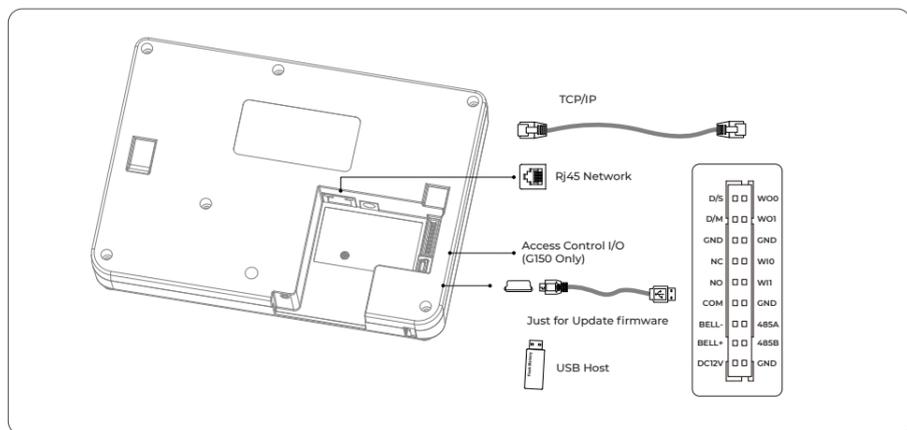


Hardware Safety Instructions

Observe the following instructions to use the product safely and prevent any risk of injury or property damage.


- Do not use oily water or sharp objects to stain or damage the display screen and buttons. Fragile parts are used in the equipment, please avoid operations such as falling, crashing, bending or heavily pressing.
- The optimal working environment of GC series is indoor. Working temperature recommended: -10°C~50°C (14°F~122°F)
- Please gently wipe the screen and panel with soft materials. Avoid scrubbing with water or detergent.
- The power for GC100 terminal is DC 5V ~ 1A and GC150 terminal is DC 12V ~ 1A.
- The device working efficiency may be affected in case the power supply cable extends too long (Recommend < 5 meters).
- Do not install the product in a location with direct sunlight, moisture, dust, or soot.

How to press fingerprint ?

• Correct Method:

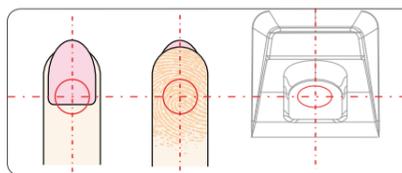


Press finger on the center of the sensor.

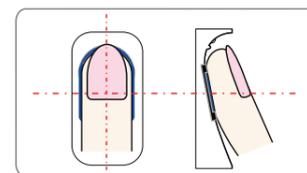

Press finger flatly and smoothly on the sensor.


• Incorrect Method:

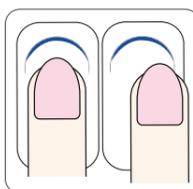

Finger not placed on the center of the sensor.




Inclined finger.

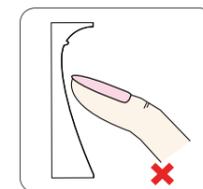


Press fingertip.

Device Operation

• Basic Settings

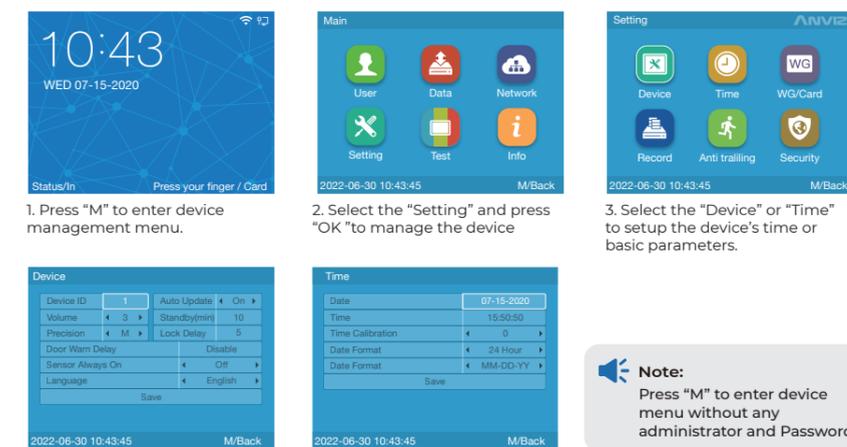


• How to register a new user ?

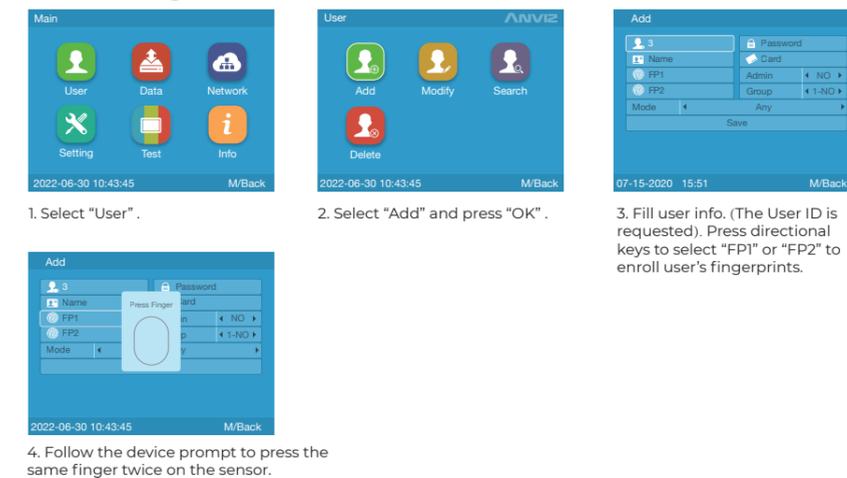

• How to setup device Ethernet Network (Server Mode)



• How to setup device Ethernet Network (Client Mode)

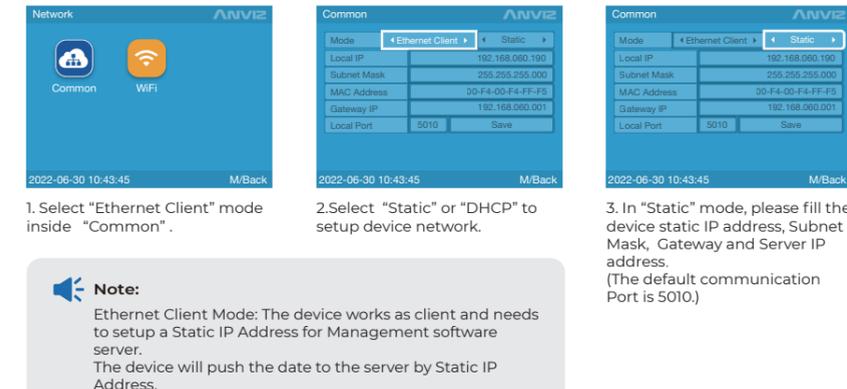



Call
+1-855-ANVIZ4U | +1-855-268-4948
MON-FRI 5AM-5PM Pacific

Email
support@anziv.com
24 Hours Answer

Text
+1-408-837-7536
MON-FRI 5AM-5PM Pacific

Community
Join community.anviz.com
if you have any question or suggestion to share

Scan and download software



Google Drive Anviz Drive

CrossChex
Standard

• How to setup device Ethernet Network (Client Mode)



4. The "DHCP" mode will automatically acquired device network information and input the "Server IP" (The default communication Port is 5010.)



5. Click "Get Local IP" to search the device IP address from the network.

• How to setup device WiFi Network (Only for GC100-WiFi and GC150)



1. Enter management menu and select "Network".



2. Select "WiFi".



3. Select the "Search" and press "OK" to search nearby WiFi networks.



4. Press directional keys to select your network.



5. Input WiFi connection password and select "Save" to finish.



6. Back to device main page. means WiFi connected.

Notes:

1. The device's WiFi connection does not support the Hidden WiFi networks.
2. WiFi password only supports characters and numbers. And the max length of passwords are 16 characters.

• WiFi Server Mode (Only for GC100-WiFi and GC150)



1. Enter "Common" to select the WiFi mode you need.



2. Select "WiFi Server" and fill the device IP address, Subnet Mask and Gateway IP address. (The default communication Port is 5010). Select the "Save" and Press "OK" to save the network setup.

Note:

WiFi Server Mode: The device works as server, does not support the DHCP network function. Because the device needs to setup a Static IP Address for the management software pull the data by command.

• Setup WiFi Client Mode (Only for GC100-WiFi and GC150)

WiFi Server Mode: The device works as server, the device needs a Static Ip Address for communication. The management software needs to pull the data



1. The "WiFi Client" mode supports "Static" and "DHCP".



2. In "Static" mode please fill the device static IP address, Subnet Mask Gateway and Server IP address (The default communication Port is 5010.)



3. In "DHCP" mode please input the Server IP (The default communication Port is 5010.)




4. Select "Get Local IP" to search the device IP address from the network.

Note:


1. In "Static" mode please get the device WiFi IP address from your system administrator.
2. We suggest user to adopt the "WiFi Client -- DHCP" mode as the device WiFi connection.

Access Control Wiring (Only for GC150)

• GC150 Access Control Wiring with Switch Power Adapt

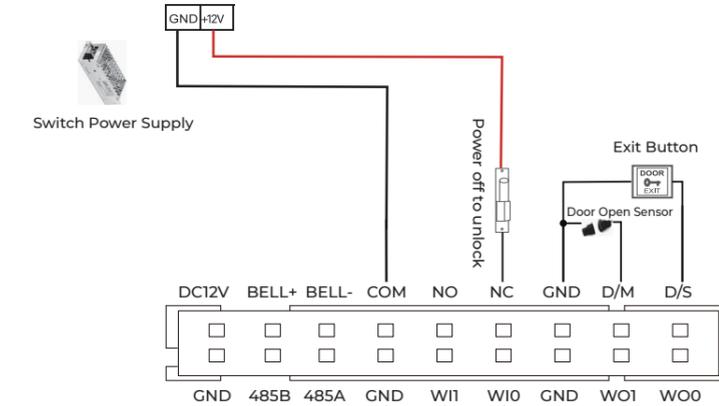


• GC150 Pro & Access Control Power Supply

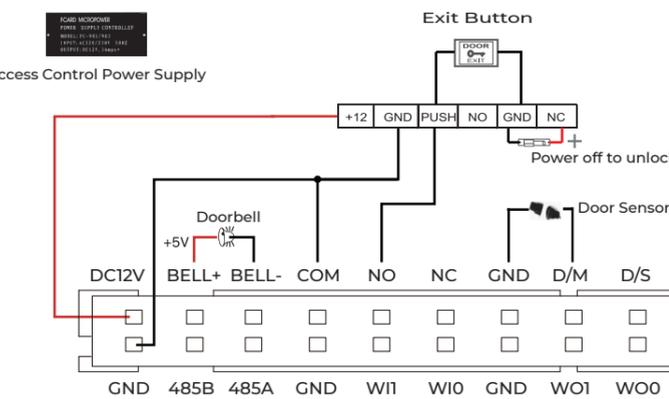

• GC150 & Anviz SC011

SC011 can work with GC150 by Anviz encrypt Wiegand code authorized to set up a distributed access control system.

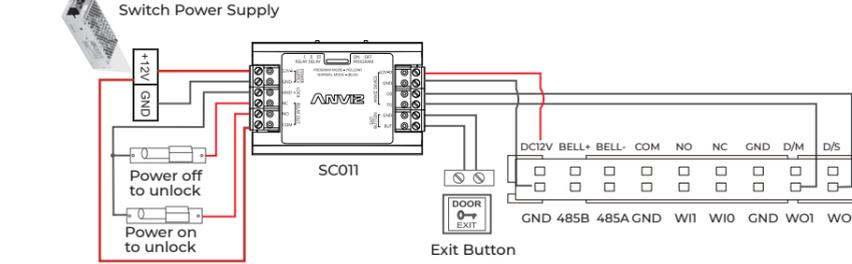

Step1: Setup GC150 Wiegand Output Mode



1. Press "M" to enter device management menu.



2. Select the "Setting" and press "OK" to enter the device menu.




3. Select the "WG/Card" in the device menu.



4. Press directional keys and "OK" to select the "Anviz WG". Then save the setup.

Step2: Authorize the GC150 device with SC011.

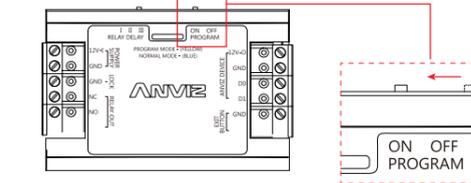

- a. Active the "Program Switch" on the SC011.
- b. Verify any registered user on the GC150 till the SC011 with beep voice and with Green LED to finish GC150 authorized.
- c. Off the program status on the SC011.