


C2SR

Outdoor RFID Reader

Quick Guide V1.1

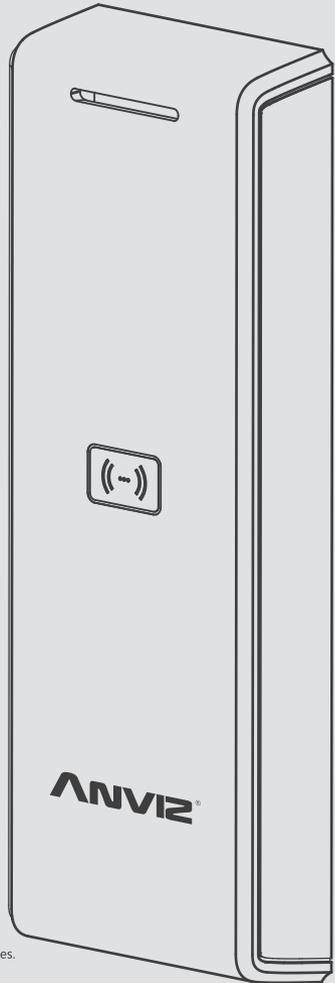

Anviz brand and product are trademarked and protected under law of the United States. Unauthorized use is prohibited.

For more information, please visit www.anviz.com, or send email to sales@anviz.com for more help.

©2021 Anviz Global Inc. All Rights Reserved.

1. Parts List



Terminal




Mounting Bracket



Accessories


2. Installation Diagram

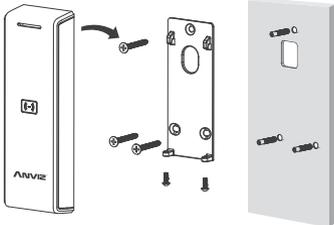

1. Drill outlet hole on the wall for device wiring and 3 screw holes on the wall according to the mounting bracket.


2. Use the screws to fix the mounting bracket on the wall. Use the screwdriver to tighten the screw follow the direction indicated, to complete the installation.

 3. Wiring Instruction



Function	Description	Color
Wiegand Output	Wiegand 1 (WO1)	White (WT)
	Wiegand 0 (WO0)	Green (GN)
RS 485 Input	485 B	Blue (BU)
	485 A	Brown (BN)
Power Input	GND	Black (BK)
	PWR +12V	Red (RD)

4. Access Wiring

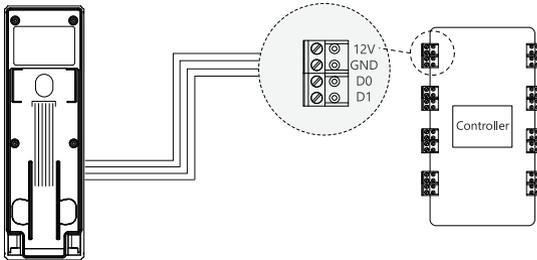

! In use, please refer to the wiring diagram description for wiring. Any damage caused by improper wiring is not covered by the warranty.